




Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

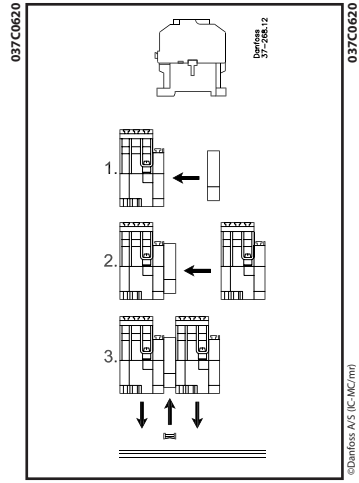


Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

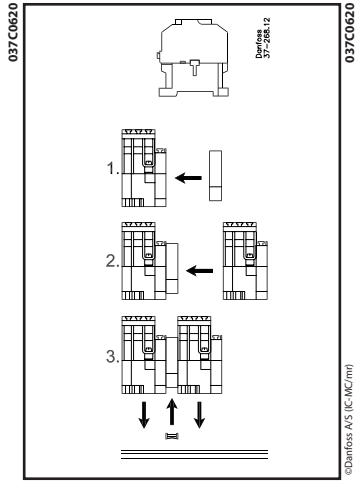


Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

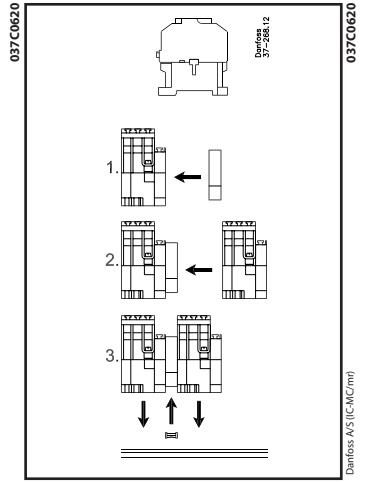


Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

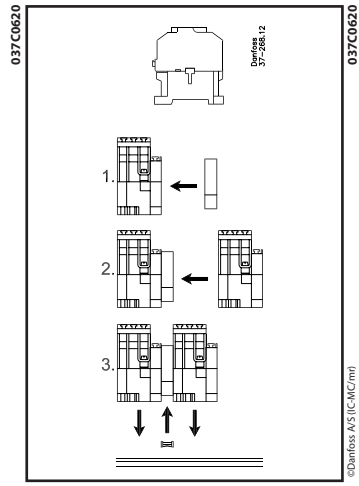


Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

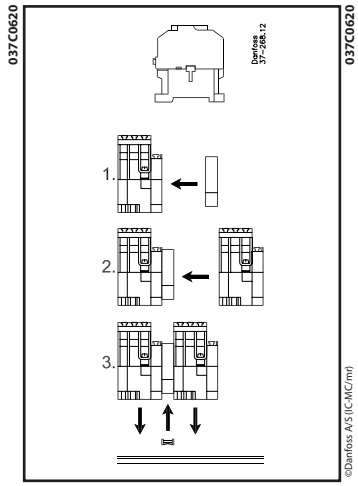


Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

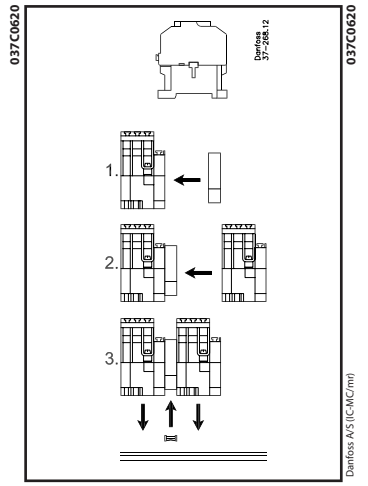

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

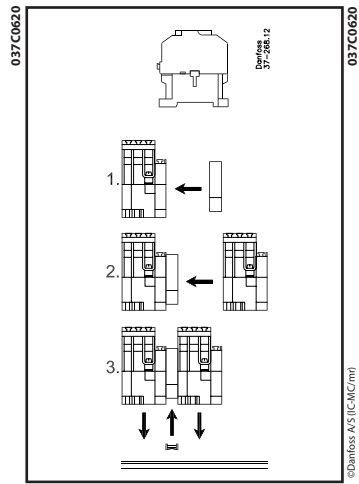

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

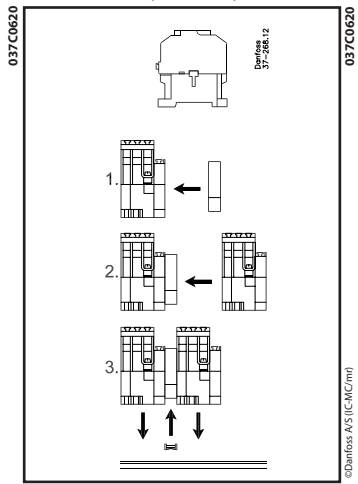

Danfoss INSTRUCTION
CI 6-30, CI 9DC-30DC, CI 9EI-30EI

