



Mounting instruction IQ40

1. LOCKING / UNLOCKING THE RELEASE BUTTON

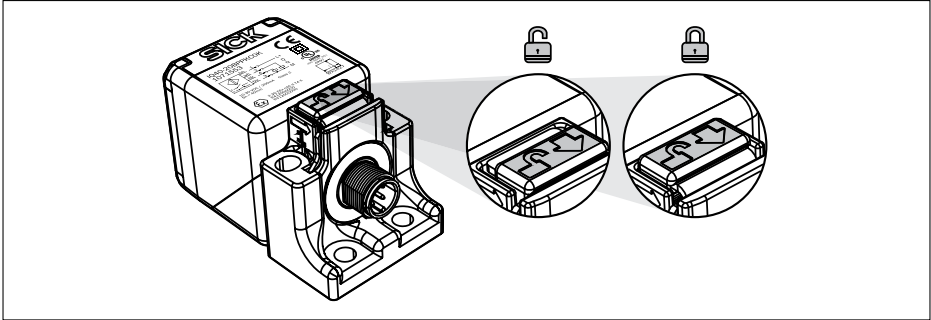


2. ADJUST THE SENSOR FACE


2.1 Unlock the sensor

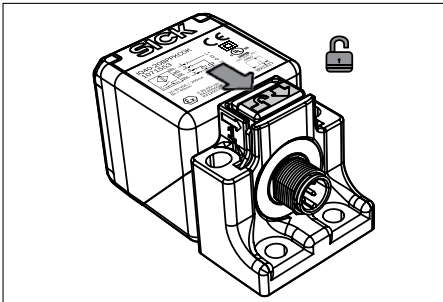


2.2 Remove the sensor head by pressing the release button

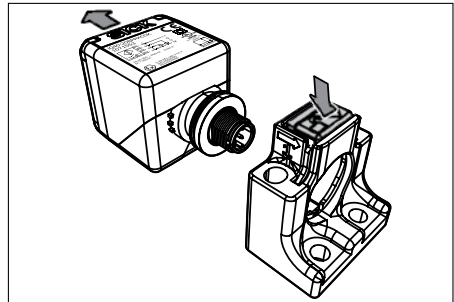

2.3 Swivel or rotate sensor head

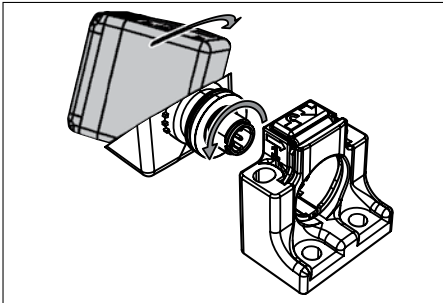


2.4 Lock sensor head in place

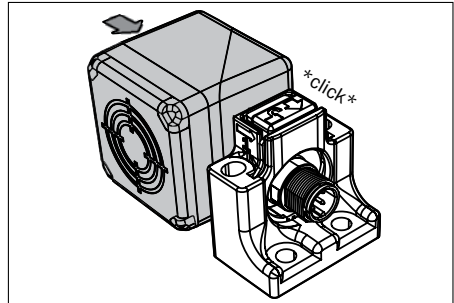


1. REMOVING THE SENSOR FROM THE BASE

1.1 Loosen and lift all 3 screws

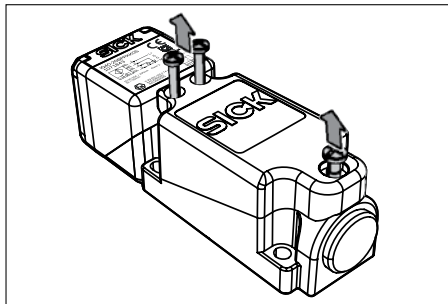


1.2 Remove sensor from base

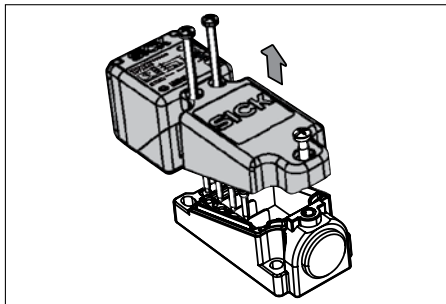


2. ADJUST THE SENSOR FACE


2.1 Loosen and lift two screws, pull sensor head forward

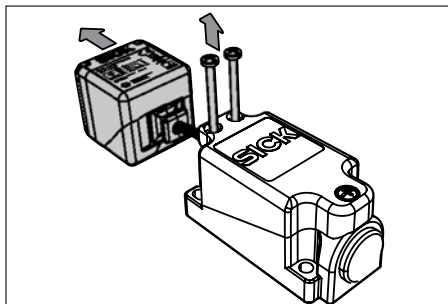


2.2 Swivel or rotate sensor head

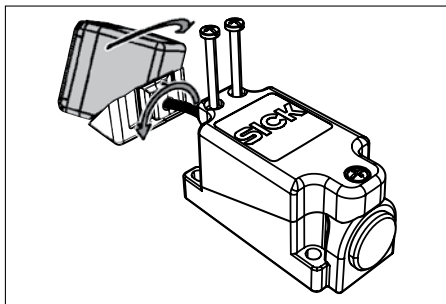

2.3 Push the sensor head back to the base and fasten screws

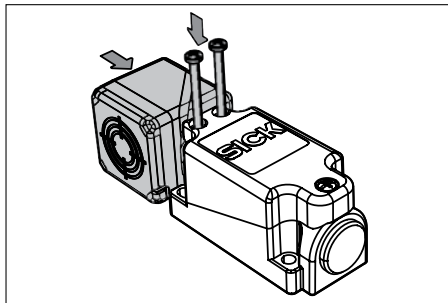

3. INSTALLATION NOTE

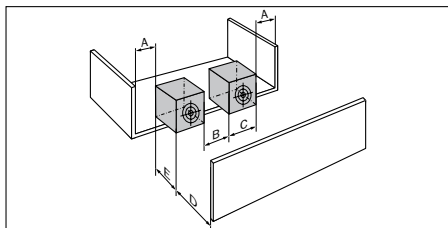

	IQ40- 20BxxxK	IQ40- 20BxxxS	IQ40- 40NxxxK	IQ40- 40NxxxS
A	0	0	42	42
B	40	40	100	100
C	40	40	40	40
D	60	60	120	120
E	0	0	40	40
M _N	1,8	1,8	1,8	1,8